

SEARSPORT WATER DISTRICT LOCATION OF RESIDENTIAL WATER METERS AND BACKFLOW PREVENTERS AND MINIMUM SETBACKS

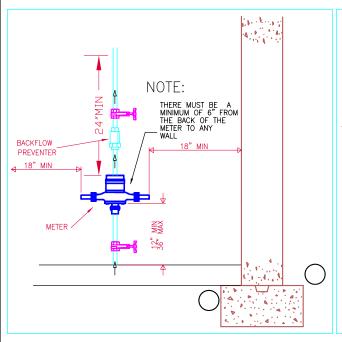

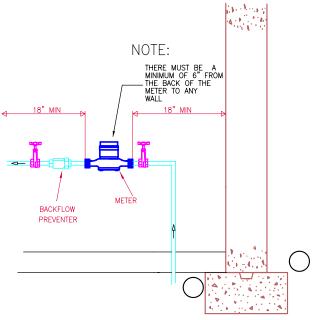

VERTICAL INSTALLATION

HORIZONTAL INSTALLATION

- 1. METER MUST BE IN A CLEAN, DRY AND ACCESSIBLE LOCATION. PLEASE DO NOT RENDER METERS INACCESSIBLE BY PERMANENTLY BOXING THEM IN. ANY BOX OR COVERING MUST BE REMOVABLE WITH A MINIMUM OF EFFORT.
- 2. VALVES ARE REQUIRED ON EACH SIDE OF THE WATER METER.
- 3. PIPE CONNECTIONS TO THE OUTPUT OF A WATER METER SHALL BE METALLIC FOR THE FIRST TWO FEET.
- 4. A DUAL-CHECK BACKFLOW PREVENTER IS REQUIRED BETWEEN THE METER AND THE DOWNSTREAM SHUT-OFF VALVE.
- 5. EASY ACCESS IS REQUIRED AT ALL TIMES. "BOXING IN (INACCESSIBILITY) OF METERS IS PROHIBITED.
- 6. THE HOMEOWNER IS RESPONSIBLE FOR ALL LABOR, OVERHEAD, MATERIAL AND EQUIPMENT COSTS ASSOCIATED WITH REPAIRING DAMAGED OR FROZEN METERS.
- 7. SPECIAL NOTE: WATER SPILLAGE OCCURS DURING REMOVAL AND SERVICING OF WATER METERS.
- 8. NO BRANCHES AT TAPS ARE PERMITTED UPSTREAM OF THE METER $\!\!\!/$ BACKFLOW PREVENTER.
- 9. METER SETTERS ARE REQUIRED FOR ALL METERS 1" OR SMALLER.

RESIDENTIAL METERS & BACKFLOWS





